




# Sprout channel cubby outer trim Replacement

How to take apart the outer trim of the device for replacement.

Written By: jasen biggins

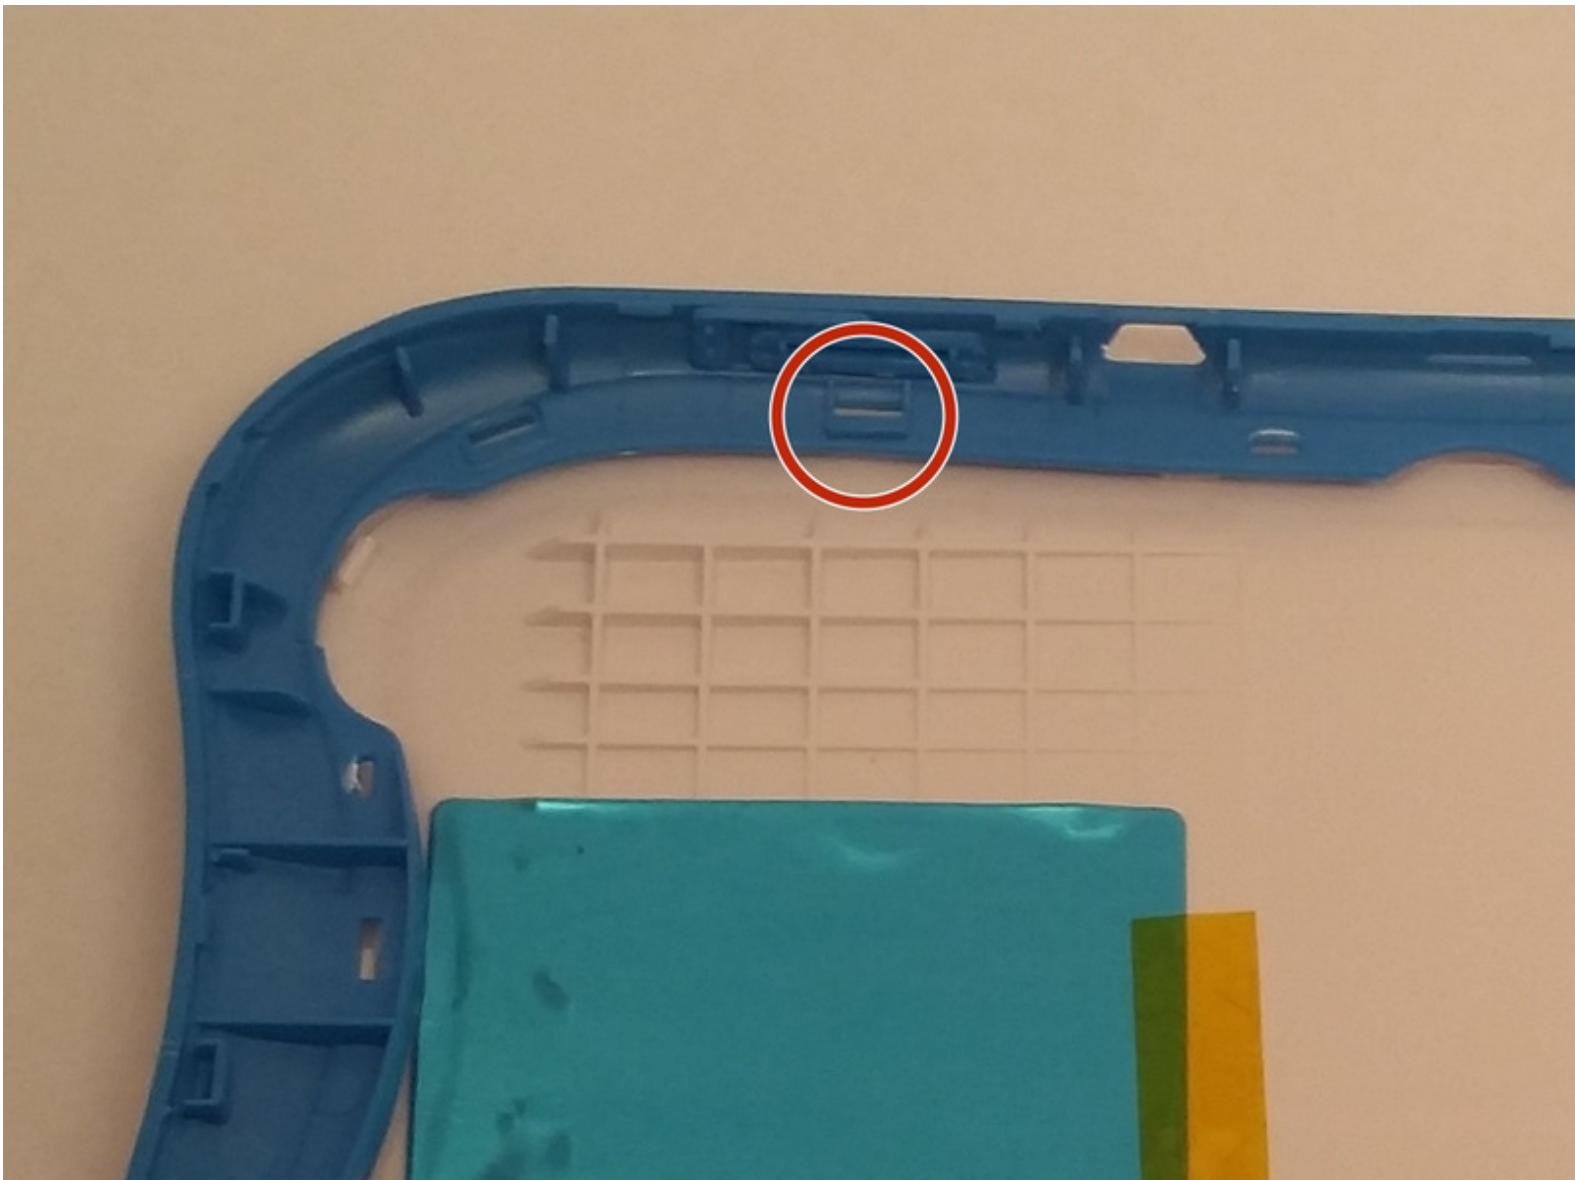

## INTRODUCTION

This is a fairly simple guide the only thing that is needed is the plastic spudger. The trim usual gets damaged from drops and will need to be replaced accordingly.


---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Front Half

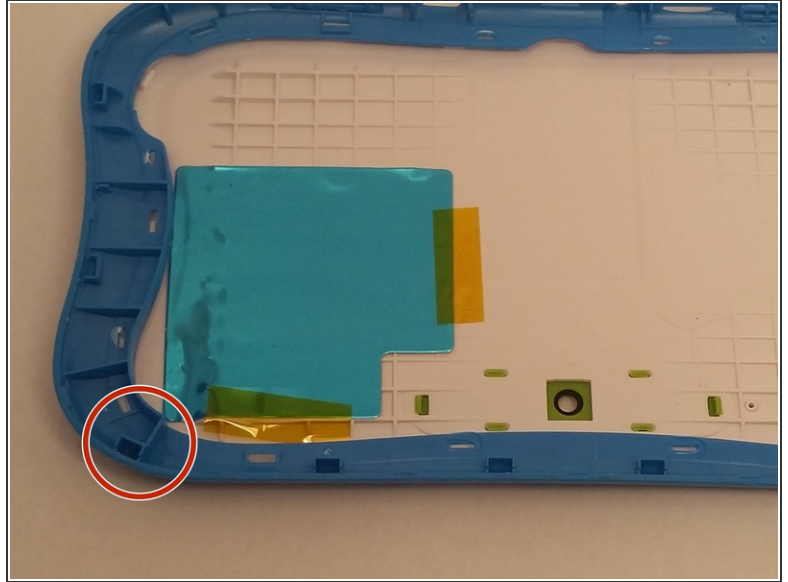

- Begin by prying apart your device and pushing in tabs. It is easiest to start on the corners.
- There are 16 tabs in total.

## Step 2 — outer trim

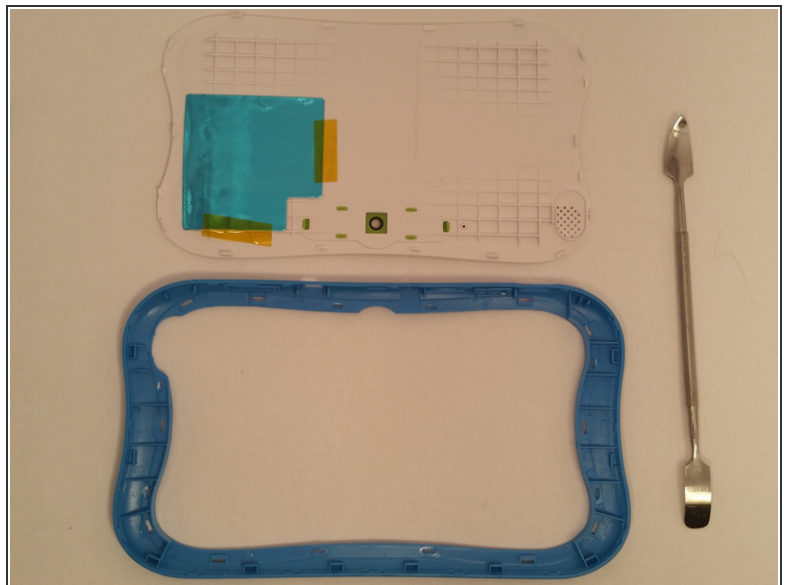

- There are 19 tabs that need to be pushed out of the inner trim. The mettle spudger works great here.

⚠ Do not push to hard on the tabs or they will break

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 12:26:04 PM.